









Honeywell Genesis 7580 (USB-COM)
(Version 06.03.2019)

<p>1</p>	<p>Recall Defaults</p>  <p>3 9 9 9 9 9 8</p>
<p>2</p>	 <p>3 3 1 6 4 7 0</p> <p>Enable Uni-Directional USB Serial Emulation Mode</p>
<p>3</p>	 <p>3 1 1 6 6 1 5</p> <p>Enable STX Prefix</p>
<p>4</p>	 <p>3 1 1 6 6 1 4</p> <p>Enable ETX Suffix</p>

Honeywell Genesis 7580 (USB-COM)
(Version 06.03.2019)

<p>5</p>	 <p>3 1 1 6 6 0 2</p> <p>Disable LF Suffix</p>
<p>6</p>	 <p>3 1 1 6 6 0 3</p> <p>Disable CR Suffix</p>
<p>7</p>	<p>Enable Normal and Inverse Color Data Matrix Decoding</p>  <p>3 2 0 0 5 3 2</p>
<p>8</p>	<p>Enable Normal and Inverse QR Code</p>  <p>3 2 0 0 6 3 2</p>